



JAYKAL G2 AREA LIGHT



MOUNTING GUIDES


JAYKAL

S: SLIP FITTER MOUNTING

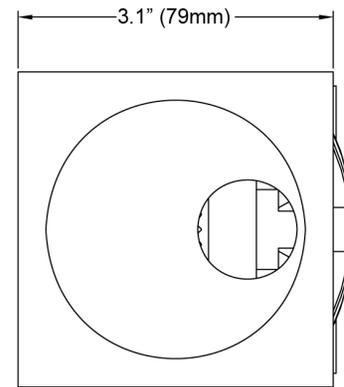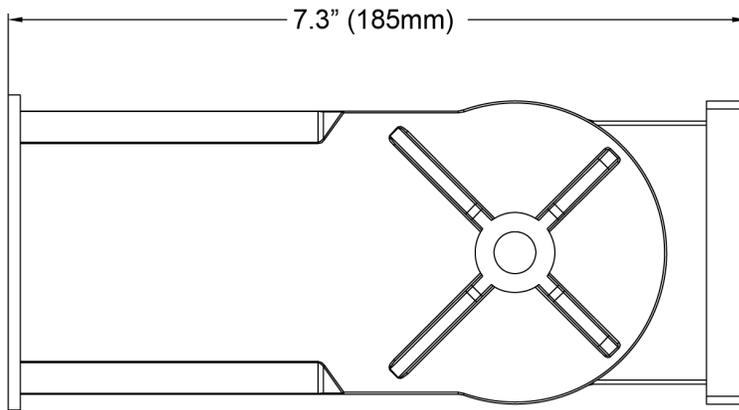


Step 1

Connect the AC wiring, and then insert the arm of the slip fitter onto the pole.

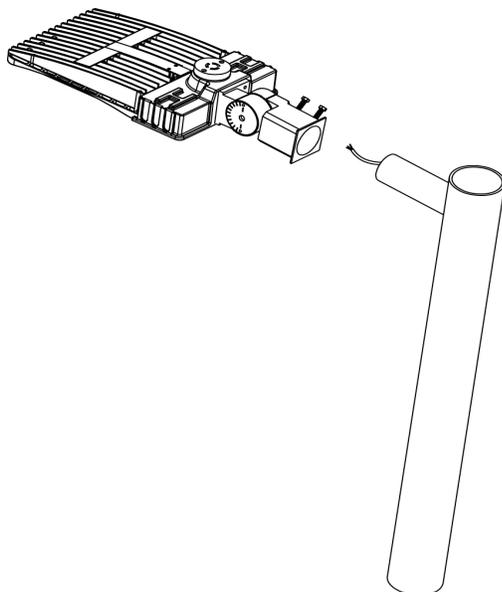

Step 2

Tighten the screws on the side of the arm and then power and restore power.

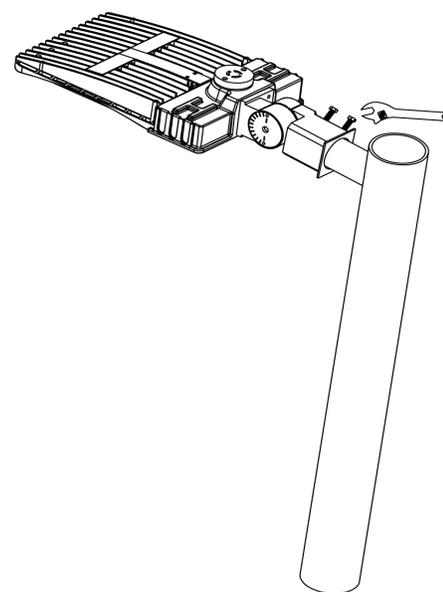

(P) 302-295-0015 | (E) sales@jaykal.net | (W) www.jaykal.net

efficiency. illuminated.




MOUNTING GUIDES

JAYKAL


T: TRUNION MOUNTING

Dimensions of the Trunion

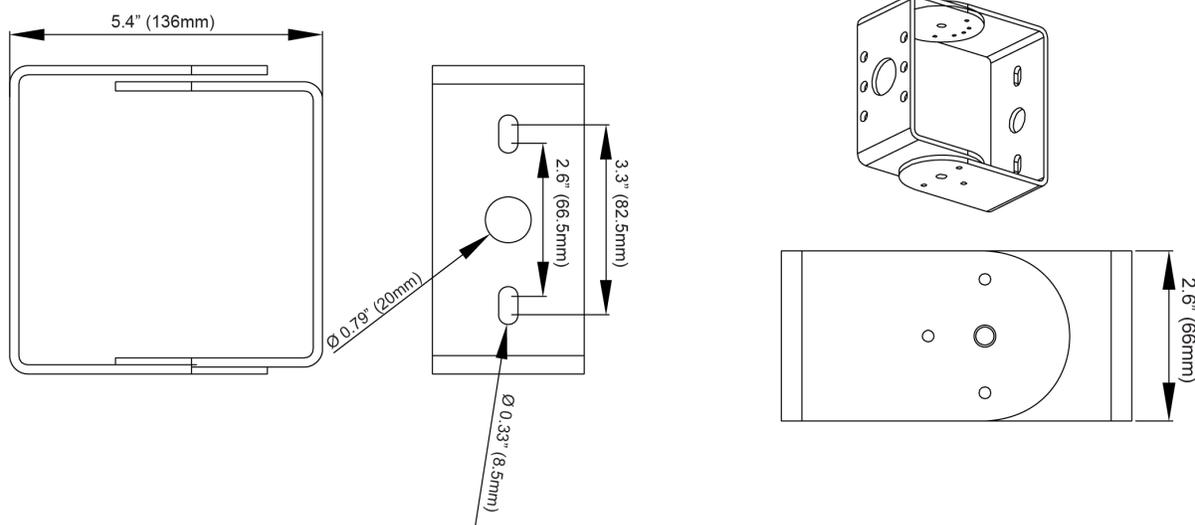


Step 1

Drill two holes on the wall corresponding to the holes on the trunion, and knock expansion screws into the holes.

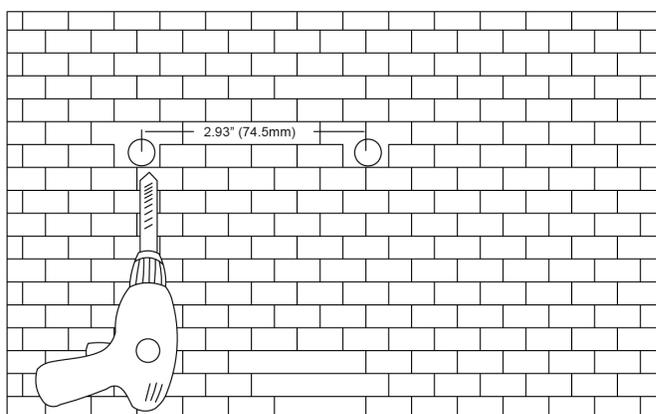

Step 2

Use the nuts to fix the fixture to the wall aiming at the expansion screws, and adjust angle of the bracket and tighten the small screw on the side, then connect the AC power wiring.

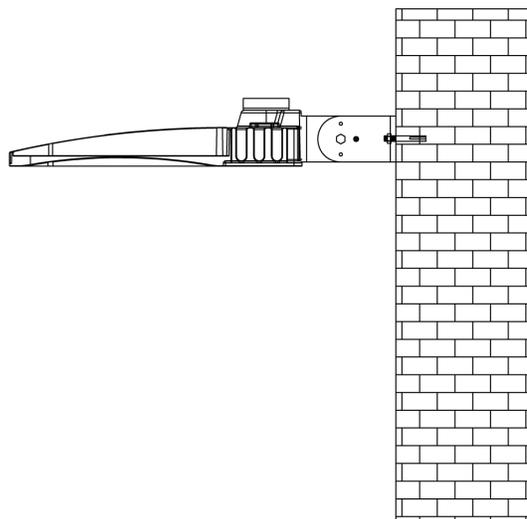

(P) 302-295-0015 | (E) sales@jaykal.net | (W) www.jaykal.net

efficiency. illuminated.




MOUNTING GUIDES

JAYKAL

A1: ARM MOUNTING FOR SQUARE POLE

Arm Dimensions

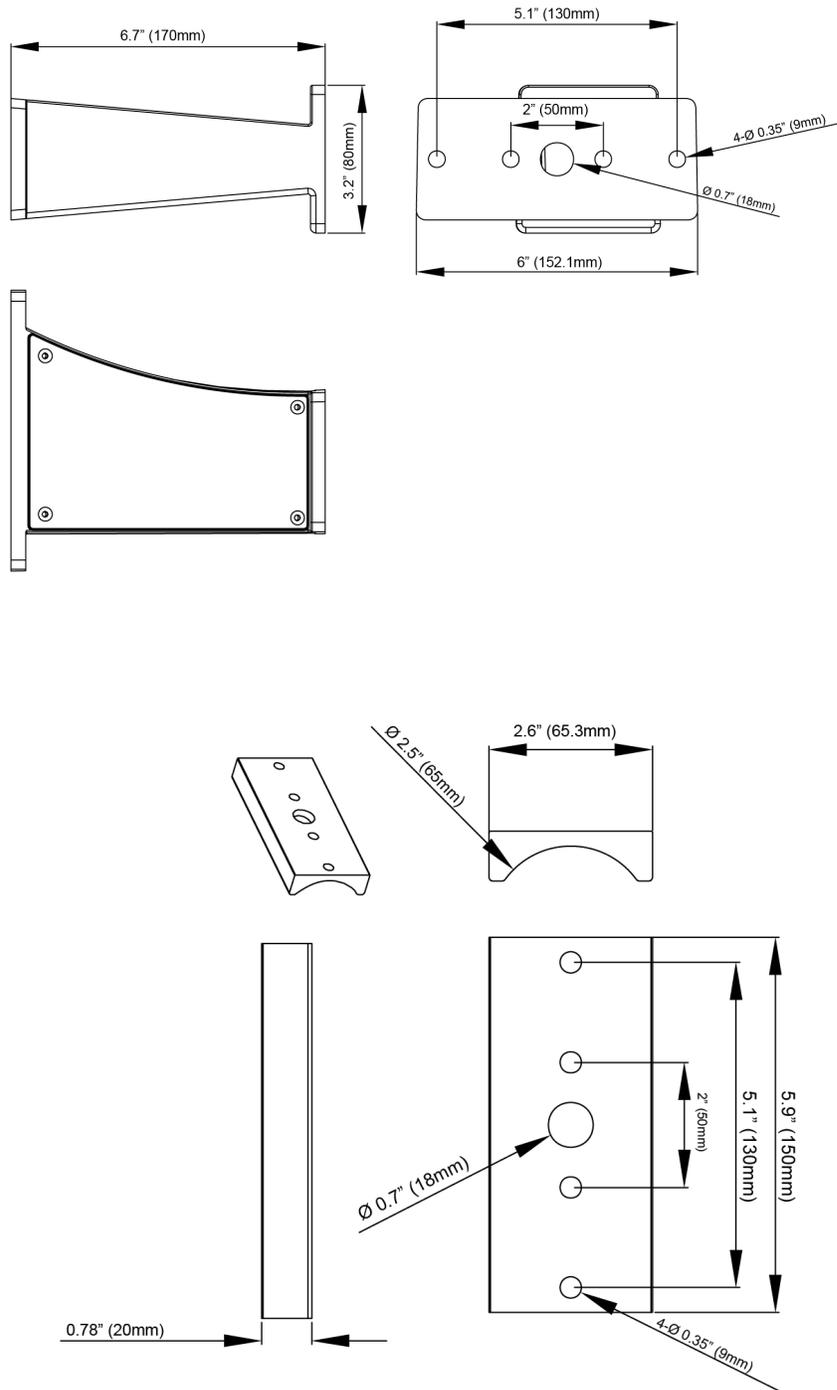


(P) 302-295-0015 | (E) sales@jaykal.net | (W) www.jaykal.net

efficiency. illuminated.



Arm Assembly Drawing


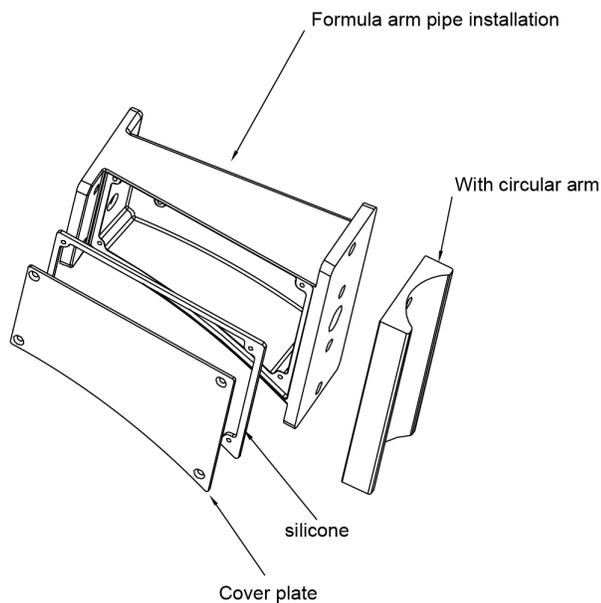


Step 1

Drill holes on the square pole corresponding to the holes on the arm, and use the bolt and nut plate to fix the fixture to the pole tightly.

Step 2

Connect the AC wire of the fixture and tighten the water-proof gasket and cover plate on the arm by screws, then power on.

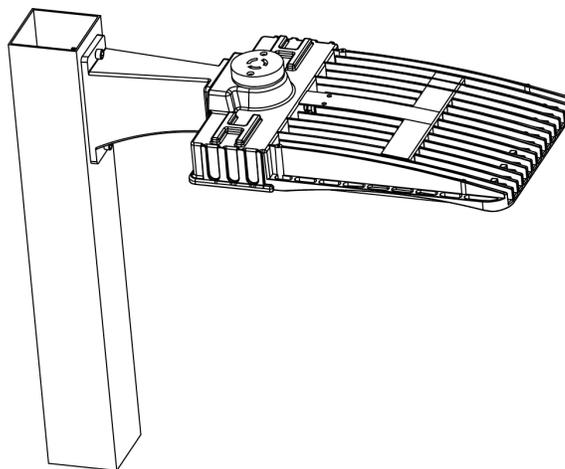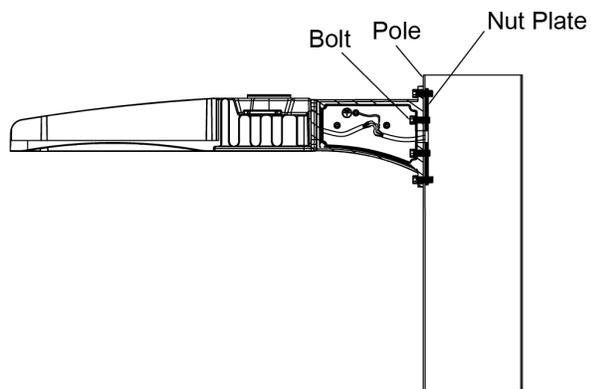




A2: ARM MOUNTING FOR ROUND POLE


Step 1

Drill holes on the round pole corresponding to the holes on the arm, and use the bolt and nut plate to mount the fixture to the pole tightly.

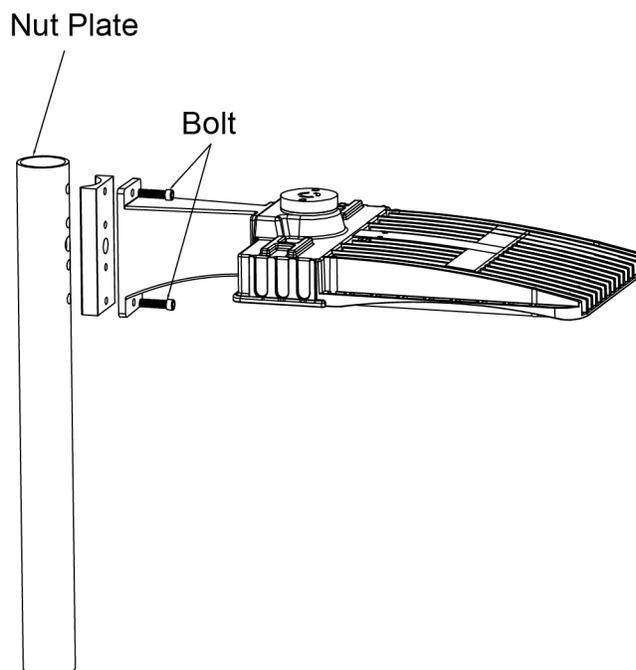

Step 2

Connect the AC wiring to the fixture and install the water-proof gasket and cover plate on the arm with the provided screws. Restore power to the fixture.

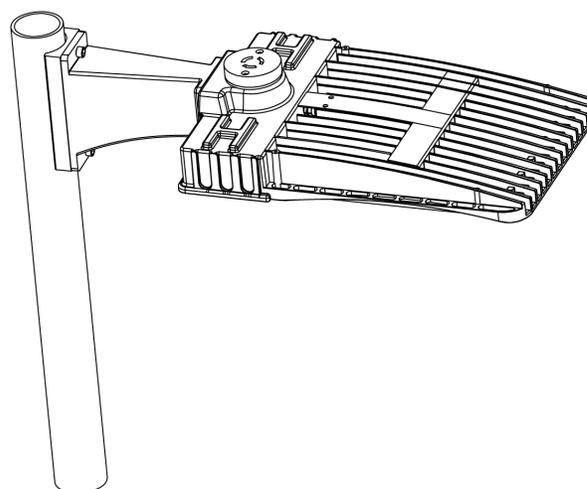



JAYKAL

QUALITY ASSURANCE

- ◆ Quality assurance is contingent upon on the proper storage, transportation, proper packaging, installation, and performance of ongoing maintenance.
- ◆ Damages caused by improper installation or unintended applications are not covered under warranty.
- ◆ During the warranty period, the manufacturer will provide appropriate support and repair services as described in the warranty.

SAFETY

- ◆ Be aware of product features, size, dimensions, weight etc. during handling and installation.
- ◆ Handle with care during transportation and installation.
- ◆ Do not touch lamps or fixtures while the power is on.
- ◆ Heat is normal when lamps or fixtures are powered on, please use caution when working near fixtures.

WARNING

- ◆ JAYKAL Flood Lights must be installed in accordance with the product specifications and instructions, by a lighting or electrical professional.
- ◆ Avoid fire and electric shock hazards. When installing the lighting fixtures, you must be familiar with the electrical environment, wiring, etc. Do not install this product if you are unsure of the required electrical codes. Contact your electrician.
- ◆ Prior to installation, be sure to have a sound understanding of all structural features, as well as product dimensions.
- ◆ Do not drill new holes or make changes to the existing wiring or product design during installation.