



4. (1) Buckle the lamp cover back to the shrapnel position (2) Install the light sensor;

Now, lamp will work properly.



