


Product Features


Adjusting Color Temperature & Power:

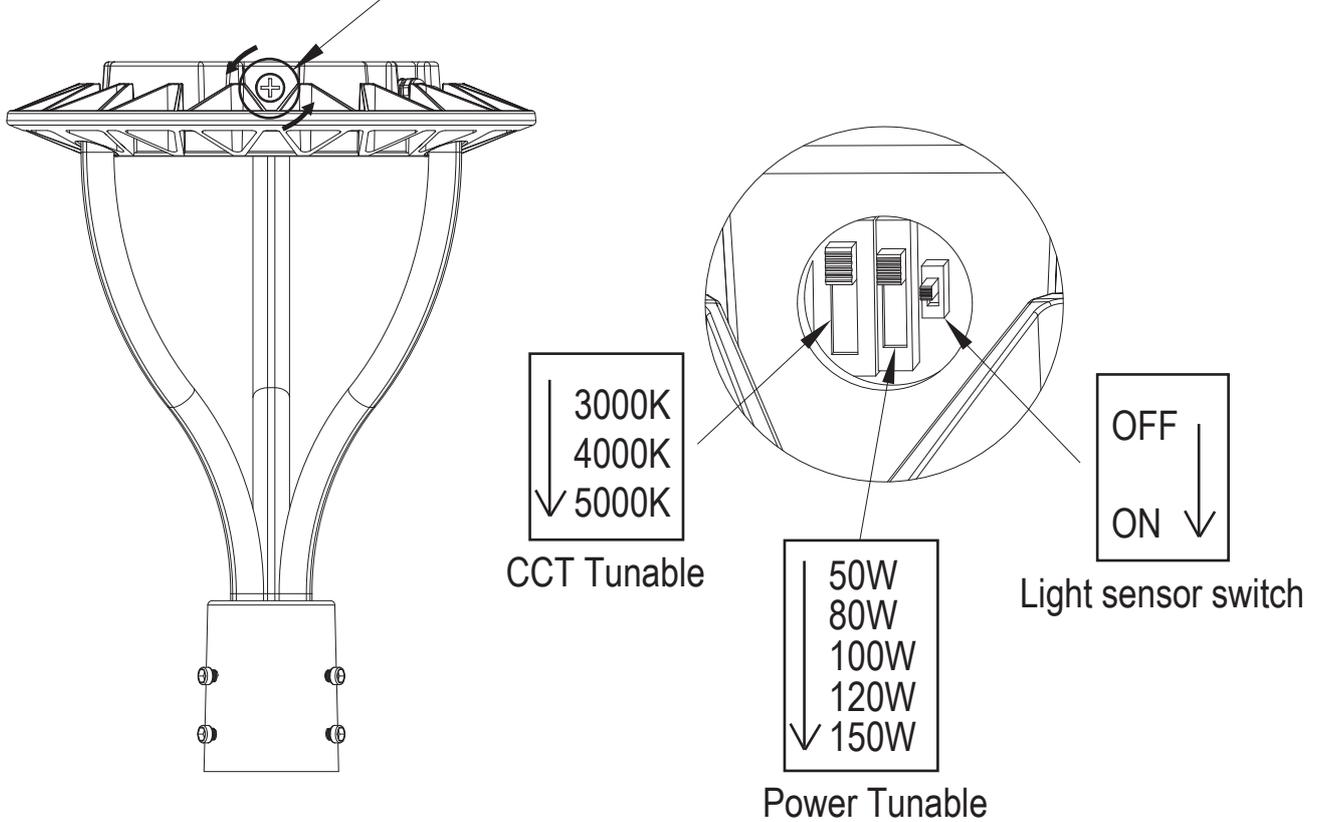

Installation

Please cut off the power before installation


Parts List

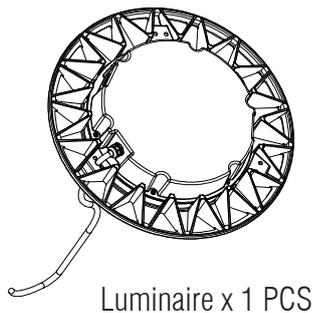

M4 x 8 Support Rod Fixing Screw
x 12 PCS



 M8 x 25 Bracket Fixing Screw
x 6 PCS




S-Type Main Support Rod
x 3 PCS




Round Rod Bracket
x 1 PCS


1. Thread the luminaire's AC cable through the center hole of the S-Type Main Support Rod.

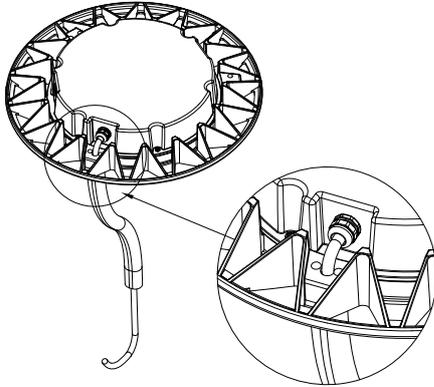


2. Align the three S-Type Main Support Rods to the base of the luminaire. Insert the six M4 x 8 screws into the six screw holes on the luminaire's base plate and tighten them into the threaded holes of the support rods.

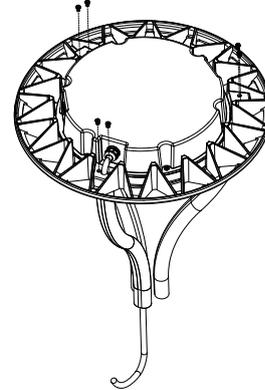


3. Align the three S-Type Main Support Rods with the three slot holes on the Round Rod Bracket. Note: Ensure the support rod with the AC cable is aligned with the set of three round holes inside the bracket's slot. Pass the AC cable through these holes.

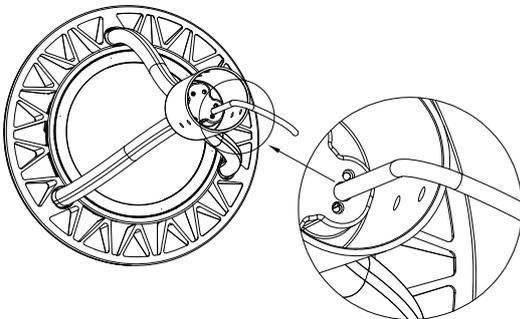

4. Align the six M4 x 8 screws with the six holes on the bottom of the Round Rod Bracket and tighten.

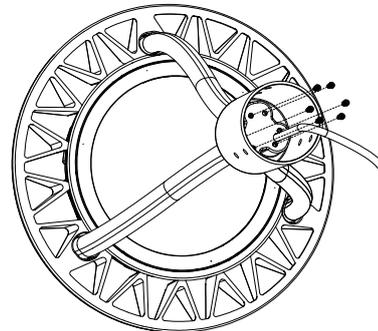

5. Connect the luminaire's AC cable to the mains power supply, following the wiring diagram.

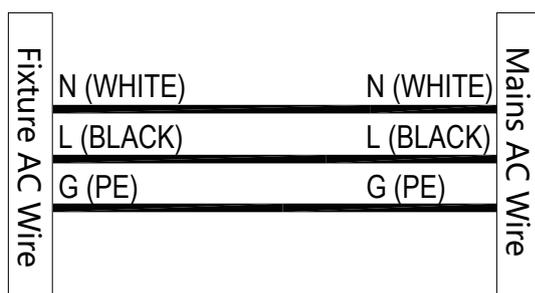

6. Insert the assembled luminaire into the lamp pole. Align the six M8 x 25 screws with the six threaded holes on the outer surface of the Round Rod Bracket and tighten them securely.

