



PROJECT NAME: PROJECT NOTES: AVKAL LED SOLUTIONS, INC. www.jaykal.net 21499 Baltimore Ave. Georgetown, DE 19947 (P) 302-295-0015 (F) 302-295-0016

PRODUCT DESCRIPTION

The JLS-ESS-IFS08ET is a compact microwave sensor that combines occupancy sensing with a photocell. When used with 0-10V dim-to-off LED drivers, it can be easily added to luminaires.

FEATURES

- Operates with 0-10VDC dim-to-off LED drivers
- Setting configurations are performed with the RM51 Remote Controller (not included)







JLS-ESS-IFS08ET 12V MICROWAVE SENSOR WITH PHOTOCELL JAYKAL


SPECIFICATIONS TABLE						
JLS-ESS-IFS08ET						
INPUT VOLTAGE	12VDC ±1V					
INPUT CURRENT	40mA					
STANDBY POWER	<0.8W					
SINKING CURRENT	≤10mA					
DETECTION RANGE	45ft Max					
MOUNTING HEIGHT	20ft Max					
IR REMOTE DISTANCE	Max 20'					
OPERATING TEMPERATURE	-30°C to 55°C, -22°F to 131°F					
IP RATING	IP20					
COLOR	White					
WARRANTY	5 Years					
COMPLIANCE	UL8750, RoHS					
SAFETY	cULus Recognized Component LED Controller E504054					

Due to our continued efforts to improve our products, specifications are subject to change without notice.

Ordering Guide

MODEL	Description					
JLS-LLE-IFS08ET.B1	Internal Photo/Microwave Motion Sensor					

WIRING

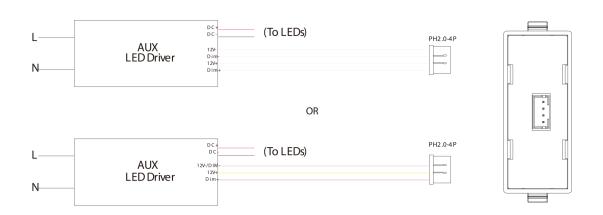







JLS-ESS-IFS08ET 12V MICROWAVE SENSOR WITH PHOTOCELL JAYKAL

DIMENSIONS


Unit:inch/mm

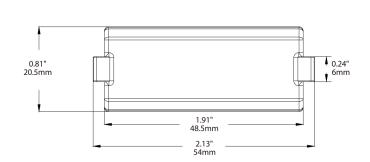

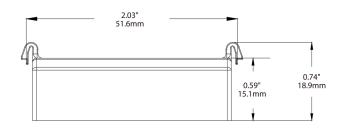


DIMMING CURVE

									Dim	ming Cu	rve									
0	0.5	1	1.5	2	2.5	3	3.5	4	4.5	5	5.5	6	6.5	7	7.5	8	8.5	9	9.5	10
0.001	0.51	1.01	1.51	2.01	2.51	3.02	3.52	4.03	4.53	5.04	5.54	6.05	6.54	7.05	7.55	8.06	8.55	9.07	9.56	9.97

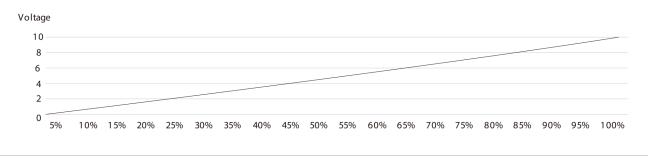

COVERAGE

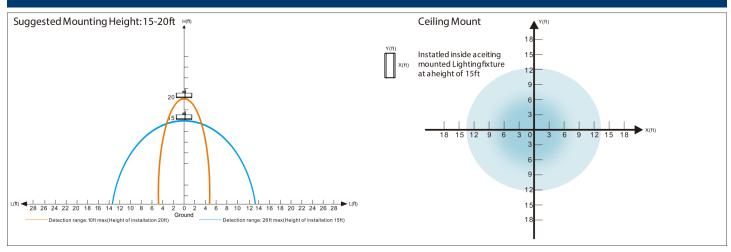





JLS-ESS-IFS08ET 12V MICROWAVE SENSOR WITH PHOTOCELL

ΙΔΥΚΑΙ

REMOTE GUIDE

ON	Turns ON luminaires.
OFF	Turns OFF luminaires.
TEST	Test mode will last 5 minutes , then return to the previous setting. In test mode, the hold time is 2 seconds , SDL is 50% and the standby time is 2 seconds .
RESET	Trim-High = 100% Sensitivity = High, T1 = 5 min, Standby Dim = 30% T2 = 60 min, Photocell = OFF.
DIM+/-	Remote will manually dim the luminaire up or down in increments of 0.5 volts . Smooth dimming should occur when holding the dimming button.
TRIM-LEVEL	Set maximum threshold value at 50% 75% or 100%.
SENSITIVITY	OFF (PIR OFF, Enter PC ON/OFF function) / LOW (50%) / HIGH (100%).
HOLDTIME	Time of no occupancy after which the fixture goes to standby: 30s / 5 min / 15 min / 30 min.
FMODE DAYLIGHT HARVESTING	(Enable/Disable) Measures and sets a feature to allow the fixture to maintain a light level when turned ON.
STANDBY DIM	Select any standby dim level: 0%/ 10%/ 30%/ 50%
STANDBY TIME	10s / 5 min / 15 min / 30 min / 1h / ∞ . " ∞ " means the standby time is infinite , and the fixture is effectively controlled by the daylight sensor.
PHOTOCELL	LOW (1fc) / HIGH (50fc) / CAL (Collects the current Lux Level) ON.
MODE	Set settings to a program profile (A to F).
SEND	Send settings to the sensor.
DEFAULT MODE A	Trim-High = 100%, Sensitivity = Low, T1 = 30 min , Standby Dim = 50%, T2 = ∞, Photocell = CAL.
DEFAULT MODE B	Trim-High = 100% Sensitivity = Low, T1 = 30 min , Standby Dim = 50% T2 = 15 min , Photocell = CAL.
DEFAULT MODE C	Trim-High = 100% Sensitivity = Low, T1 = 30 min , Standby Dim = 50% T2 = 15 min , Photocell = OFF.
DEFAULT MODE D	Trim-Low = 50% Sensitivity = Low, T1 = 30 min , Standby Dim = 50% T2 = 30 min , Photocell = CAL.
DEFAULT MODE E	Manual Mode, Trim-High = 100%.
DEFAULT MODE F	Daylight Harvesting, Trim-Low = 50% Sensitivity = Low, T1 = 15 min .

