

## Tools Required (Not Included)(Cont.)

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### Electrical Connection Wiring:

1. Connect BLACK (line) driver lead to voltage supply Line position (HOT).
2. Connect driver WHITE lead to the NEUTRAL supply position.
3. Connect the GREEN ground lead to the supply ground lead.

### 0-10V Dimming:

4. Connect VIOLET lead to supply POSITIVE dimming lead.
5. Connect GREY lead to the supply NEGATIVE dimming lead.

### NOT Using 0-10V Dimming:

6. Ensure VIOLET and GREY 0-10V dimming leads are properly capped.


Pink Wire (Negative dimming lead)

Violet Wire (Positive dimming lead)

Black Wire (Hot)

White Wire (Neutral)

Green Wire (Ground)

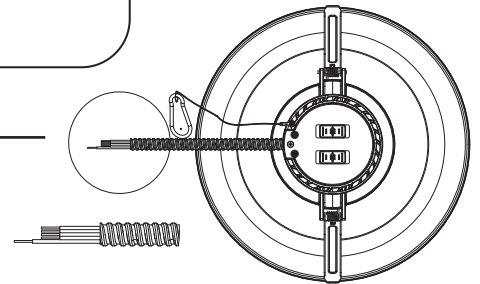


## Tools Required (Not Included)(Cont.)



Gloves



Safety goggles

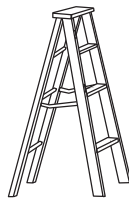

Ladder



Wire  
Cutter



Wire  
Stripper



Wire Nuts

## Packing List(1PK)

### For Engine

No.	Descriptions	Qty.
1	LED Engine	1
2	Installation Manual	1


### For Reflector Kit

No.	Descriptions	Qty.
1	Reflector Kit	1
2	Installation Manual	1
3	Ceiling Cut-out Template	1


# Pre-Installation

First, Select the light engine what you want. The spec. of the light engines as below:

No.	Light Engines	Size	Input	Dimmable	CRI	CCT	Beam Angle	Lumens Output
1	JLS-CRNC-4-M1-MCCT	4"	120-277V @50/60Hz	0-10V, 5-100%	90+,	5CCT: 27K+30K+35K+40K+50K	24-45°	750/1000/1500lm
2	JLS-CRNC-4-M2-MCCT						24-45°	1500/1800/2100lm
3	JLS-CRNC-4-M1-CCT					Single CCT: 27K/30K/35K/40K/50K	22-45°	900/1200/1800lm
4	JLS-CRNC-4-M2-CCT						22-45°	1250/2000/3000lm
5	JLS-CRNC-6-M5-CCT	6"				30-50°	3200/4000/5000lm	

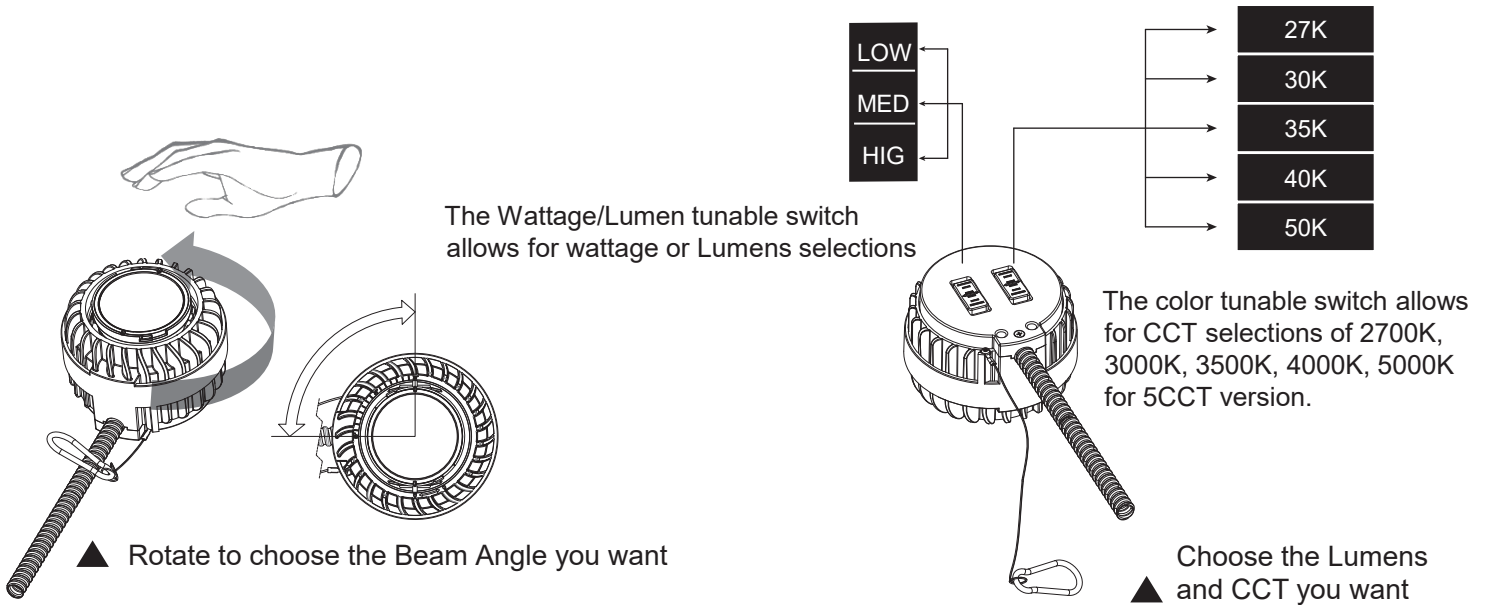


Second, Select the Reflector Kit and assemble with Light Engine.

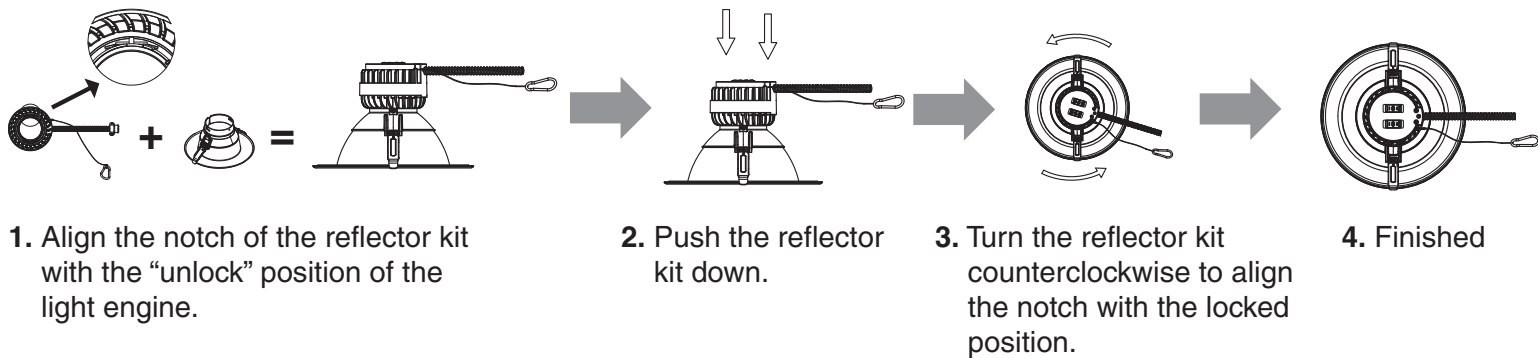

## Retrofit Installation(A)

**WARNING: Make sure the POWER is TURNED OFF in which you are installing the product.**

1. Remove existing lamp and reflector. If existing trim or can are present, remove from the ceiling or move it out of the way. Make sure to retain existing rough-in kit components. (Figure 1)
2. Measure the ceiling opening and ensure the edge of the downlight retrofit will cover the entire hole and sit firmly in the ceiling. (Figure 2)
3. Attach the carabiner safety lanyard to the existing fixture housing. (Figure 2)
4. Remove the junction box faceplate. Disconnect wiring to existing ballast. Remove appropriate knock out on junction box. (Figure 3)
5. Connect incoming AC mains power to fixture input leads. Insert the downlight conduit into the J-box and wire to the power source (black to hot, white to neutral, violet to 0-10V dimming positive, Pink to 0-10V dimming negative). Reattach the J-box cover when done. (The grounding of the overall system shall be done in accordance with NEC and local codes). (Figure 3)
6. Bend the spring clips upward so they are in an upright and insert downlight into hole in the ceiling / housing. (Figure 4)
7. Once downlight is inside the ceiling and housing, release the spring clips and push the fixture up into the ceiling until securely fixed and flush with the ceiling (rotating the downlight may be necessary to properly engage the spring clips and ensure a secure fit). (Figure 5)
8. Restore power at the source. The installation is complete. (Figure 6)

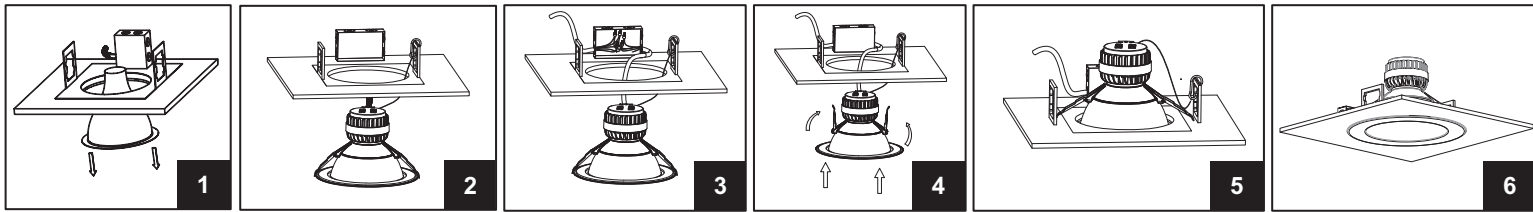

## New Construction Installation(B)

**WARNING: Make sure the POWER is TURNED OFF in which you are installing the product.**

1. If using a new construction plate, install it in the ceiling first.
2. If a new hole is needed, cut hole according to downlight cut-out dimension or "Ceiling Cut-out Template" per model number.(Figure 7)
3. Attach the carabiner safety lanyard to secure place inside the ceiling.(Figure 8)
4. Remove the junction box faceplate. Disconnect wiring to existing ballast. Remove appropriate knock out on junction box.
5. Connect incoming AC mains power to fixture input leads. Insert the downlight conduit into the J-box and wire to the power source (black to hot, white to neutral, violet to 0-10V dimming positive, Pink to 0-10V dimming negative). Reattach the J-box cover when done. (The grounding of the overall system shall be done in accordance with NEC and local codes). (Figure 9)
6. Bend the spring clips upward and insert downlight into hole in the ceiling / housing. (Figure 10)
7. Once downlight is inside the ceiling and housing, release the spring clips and push the fixture up into the ceiling until securely fixed and flush with the ceiling (rotating the downlight may be necessary to properly engage the spring clips and ensure a secure fit). (Figure 11)
8. Restore power at the source. The installation is complete. (Figure 12)

